


Batten Installation


(800) 342-5033

www.haarsticksailmakers.com

- 1) All battens are labeled numerically in descending order, the top batten is #1 starting from the head of the sail going down the leech. Check the number on the batten to assure you are inserting the correct batten. With the pocket facing up, insert the batten into the pocket on top of the webbing with arrow on the batten pointing toward the luff of the sail.

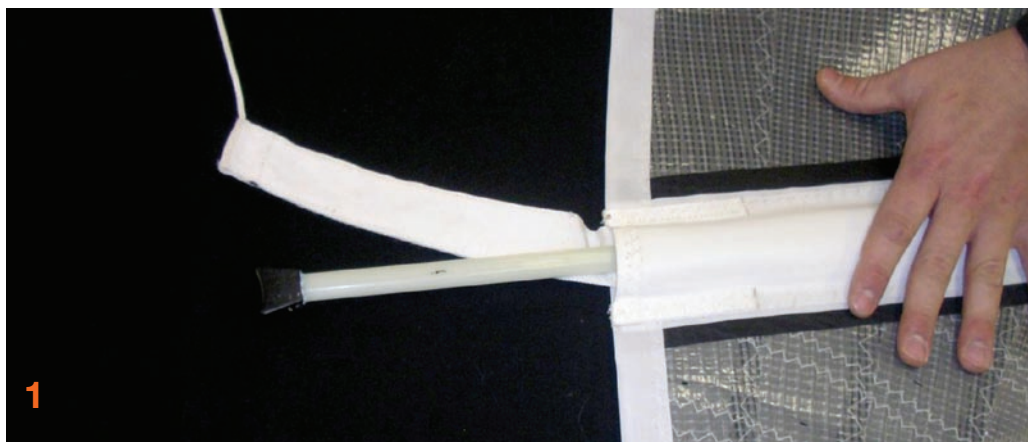




- 2) Insert the batten key into the pocket at the end of the webbing/string assembly.

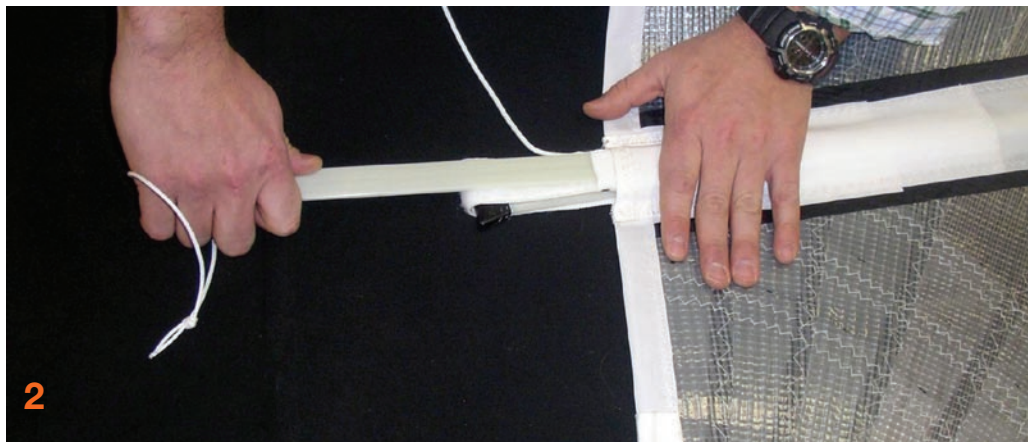

3) Holding onto the string, insert the webbing into the batten pocket. Make sure the webbing goes over the batten allowing the Velcro to attach to its “mate” on the inside of the pocket. Apply just enough tension to remove the wrinkles in the sail, but be careful not to over the tension the batten.

4) As the batten key is removed be sure to apply some pressure to seat the Velcro pieces together inside the batten pocket.

5) The completed installation should look like this.

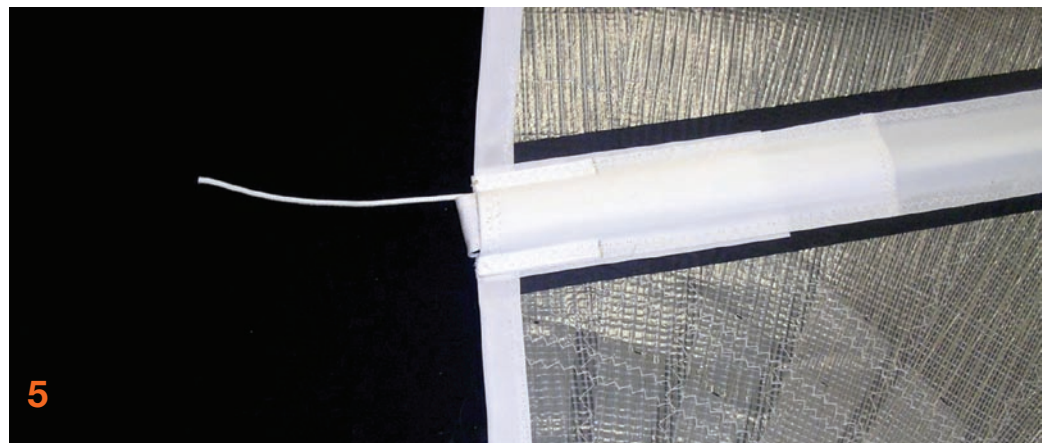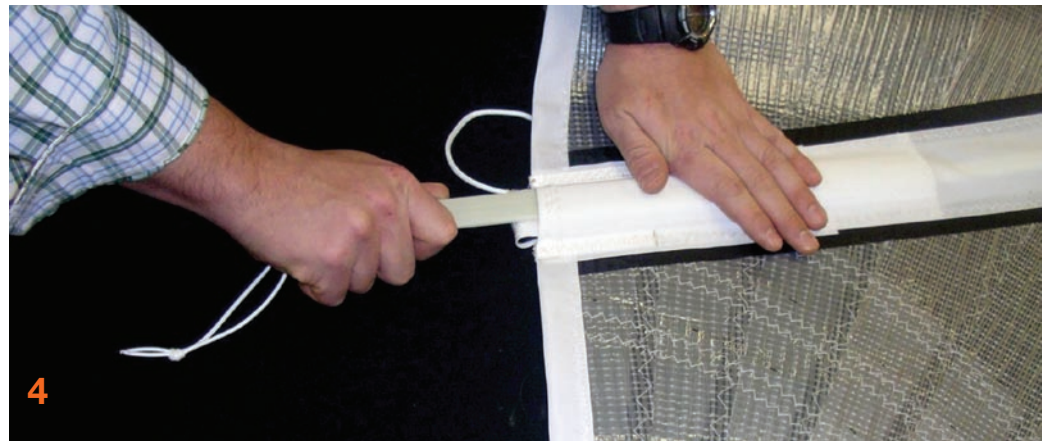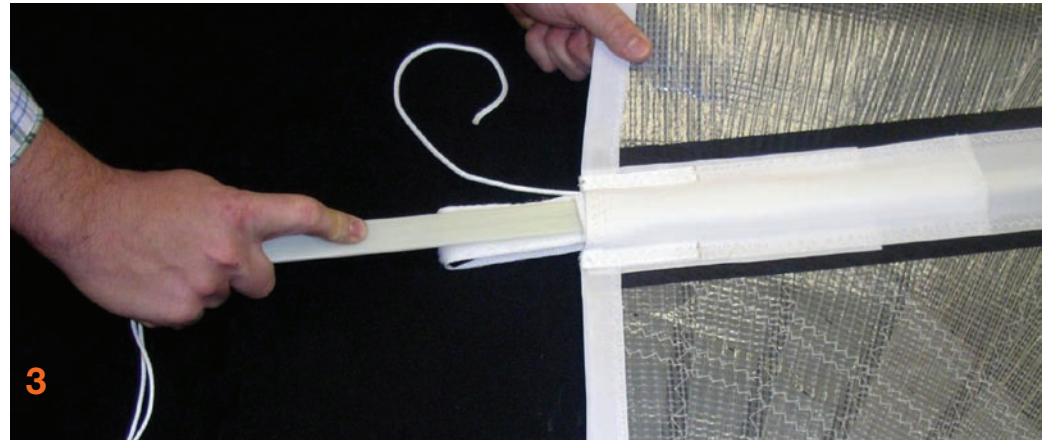

To remove the batten simply insert the batten key to break the grip of the Velcro. With the batten key still inserted tug on the string. Make sure to completely break the grip of the Velcro with the batten key; this will ease removal of the string/webbing assembly.



1461 Hudson Avenue
Rochester, NY 14621

(800) 342-5033

www.haarsticksailmakers.com
info@haarsticksailmakers.com